

Airloc® or ALoc® Pin Installation/Removal



Figure 1

Installation – With the stud installed in the panel, position the ALOC 6000 pliers as shown in Figure 1 over the pin. Set the locking adjustment such that, when the pliers lock, the pin is centered. Simply fine tune the lock adjustment then press the pin in either direction until centered.

To remove a pin – Step 1 - Set the lock adjustment so that the pin is pressed completely in one direction to the limit of the jaws. The pin will be flush on one side, protruding on the other. (pin will protrude opposite to that shown in Figure 1)



Figure 2

Removal – Step 2 – Lock the pliers onto the protruding pin as shown in Figure 2. Use a nail cutter (shown) or a side cutting pliers to engage between the end of the ALoc 6000 tool and the stud shank. Use an easy prying motion to completely remove the pin.